




TM

RAZER™

ARCTOSA™

GAMING KEYBOARD

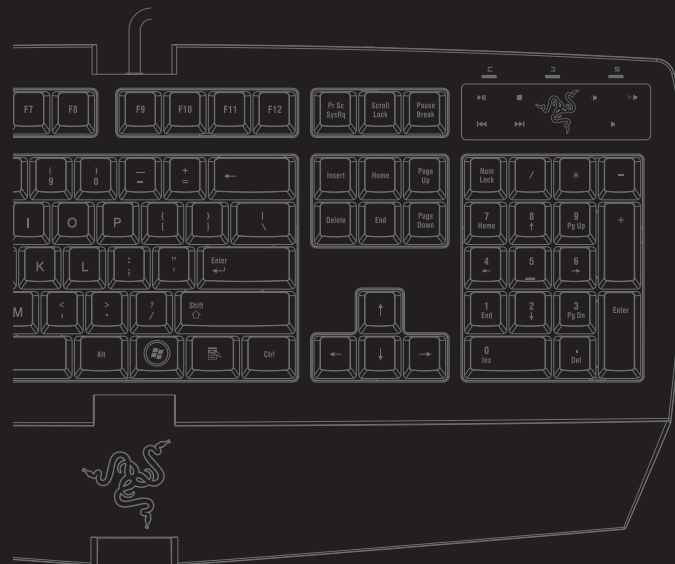

QUICK START GUIDE



CONTENTS

- 02 Introduction
- 03 Package Contents
- 03 System Requirements
- 04 Installation / Registration / Technical Support
- 06 Key Features
- 08 Configuring Your Razer Arctosa™
- 11 Using Your Razer Arctosa™
- 12 Safety And Maintenance
- 12 Legalese
- 13 FCC Declaration of Conformance



Built with Razer's award-winning technology, the Razer Arcosa™ takes on the same lethal traits found in Razer's suite of gaming peripherals. You can always be sure of your next move with its awesome host of features like fully-programmable Hyperresponse™ keys, 1000Hz Ultrapolling™ and gaming cluster with selective anti-ghosting capability.

Say goodbye to amateur hour; your gaming abilities can be brought to the next level now.

Razer Arcosa Gaming Keyboard
USB 1.1/2.0 compatible keyboard for Windows® XP / x64 / Vista / Vista64

Note: While the Razer Arcosa is designed to give you an edge over your opponents, it is not intended for automated gameplay.


PACKAGE CONTENTS

- Razer Arcosa Gaming Keyboard
- Quick Start Guide with Razer Driver Downloader CD
- Certificate of Authenticity
- Sticker

SYSTEM REQUIREMENTS

- PC with built-in USB port
- Windows® XP / x64 / Vista/ Vista64
- Internet connection (for driver installation)
- CD-ROM drive
- 35MB free hard disk space

INSTALLATION / REGISTRATION / TECHNICAL SUPPORT

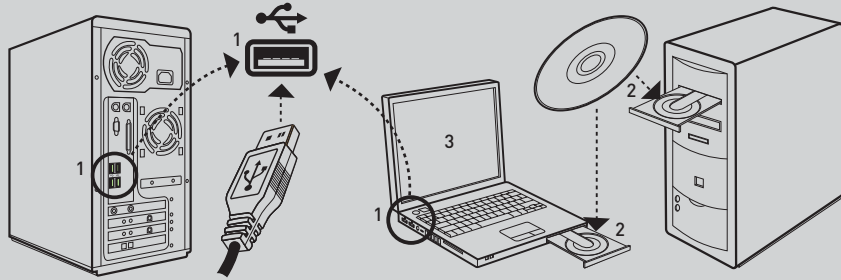

Windows® XP / x64 / Vista / Vista64 Installation Instructions

1. Plug the Razer Arctosa into the USB port of your computer.
2. Insert the Razer Software Driver Downloader CD into your CD-ROM drive.
3. When the Razer Software Driver Downloader setup screen appears, please select your language. Click NEXT.
4. Read the license agreement. Click I AGREE if you accept all terms of the agreement.

5. Please wait while the Downloader downloads the latest driver installer.
6. Once the driver installer is downloaded, click INSTALL to start the installation immediately; else the installation will begin in 5 seconds.
7. Follow the on-screen instructions.
8. When the installation is completed, follow the instructions on-screen to restart your computer. Click FINISH.

REGISTERING YOUR RAZER ARCTOSA


Please visit www.razerzone.com/registration/ for online product registration.

What you'll get:

- 1 year limited manufacturer's warranty
- Free online technical support at www.razersupport.com.

KEY FEATURES

Default button assignments

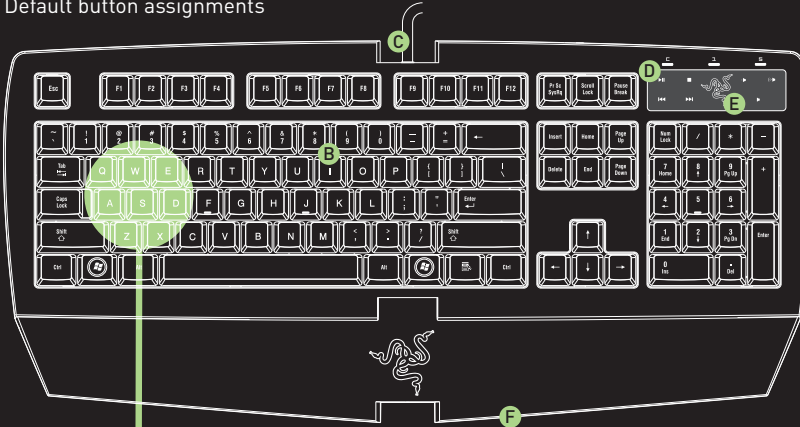

GAMING CLUSTER
with anti-ghosting capability

- A Gaming cluster with anti-ghosting capability
- B HyperResponse™ keys
- C 1000Hz (1ms) response time
- D Media keys
- E Profile key
- F Detachable wrist rest


media keys



- ▶ Play / Pause – Plays/pauses media files
- Stop – Stops media files
- ◀◀ Previous Track – Returns to previous track
- ▶▶ Next Track – Skips current track
- ▶ Volume down – Reduces volume
- ◀▶ Volume up – Increases volume
- ▶ Mute – Toggles mute function
- 🐍 Razer Logo – Switches profiles with F1 - F10

CONFIGURING YOUR RAZER ARCTOSA


DRIVER CONTROL OVERVIEW

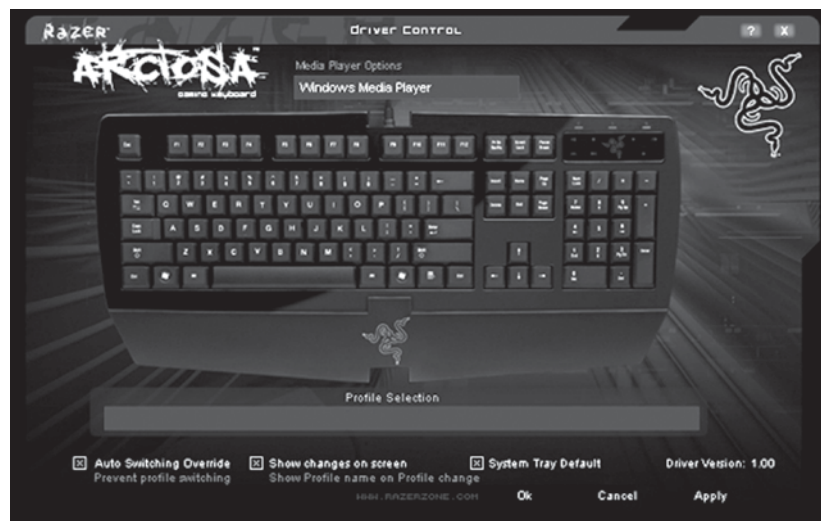

Profile Selection Menu


Changes the currently active profile.

Click the Profile Selection tab and choose the desired profile from the menu.

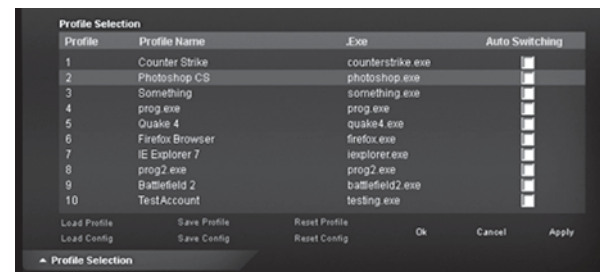

Macro Key Functions

If you would like to assign a macro, click the "Macro Key Functions" tab to open up the Macro Key Functions Window.

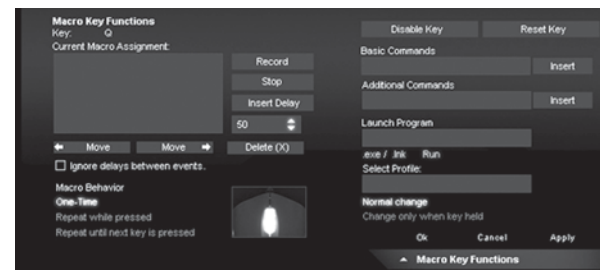

Auto Switching Override

Check this to override all enabled Auto Switching Profiles in the Profile Settings Menu.

Show Changes on Screen

Check this to view visual changes such as the text "Profile 1" on screen when Profile 1 is activated.

System Tray Default

Check this option to load the Razer Arctosa Configurator when double-clicking the system tray icon.

USING YOUR RAZER ARCTOSA

SWITCHING PROFILES

You can switch between profiles in three ways:


- a) By pressing the "Razer Logo" button + Function key (F1 – F10).
- b) By selecting a profile in the Razer Arctosa Driver Control.
- c) By programming a macro key in the Razer Arctosa Configurator to activate a particular Profile.

PROGRAMMING MACRO KEYS

Example: To configure Macro Key Q to "Save As.." in Photoshop.

1. Open up the Razer Arctosa Driver Control.
2. Click Q to slide open the Macro Key Functions windows.
3. Click the "Record" button.
4. Type "Shift", "Ctrl" and "S" inside the Current Macro Assignment box.
5. Click OK.

Note: You cannot record a mouse click or other commands during the recording phase. You can add them after you have completed recording the sequence of keystrokes.

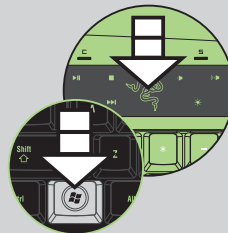

SETTING GAMING MODE

Gaming mode prevents accidental activation of the Windows Start function by disabling the Windows buttons.

You can toggle the Gaming Mode ON/OFF by pressing the "Razer Logo" button together with one of the Windows buttons. When this key combination is pressed, both Windows buttons are disabled. To reactivate the Windows buttons, press the "Razer Logo" button together with one of the Windows buttons again.

SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Arctosa™, we suggest that you adopt the following guidelines:

1. Should you have trouble operating the keyboard properly and troubleshooting does not work, unplug the device and call the Razer™ hotline or go to www.razerzone.com for support. Do not attempt to service or fix the device yourself at any time.
2. Do not take the keyboard apart (doing so will also void your warranty) and do not attempt to service it yourself or operate it under abnormal current loads.
3. Keep your keyboard away from liquid, humidity or moisture. Operate your keyboard only within the specified temperature range of 0°C (32°F) to 40°C (104°F). Should you operate it in a temperature that is beyond this range, unplug and switch off the device in order to let the temperature stabilize within the optimal temperature range.

COMFORT

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. If you should experience any physical discomfort while using your keyboard, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical doctor immediately.

MAINTENANCE AND USE

There is a little regular maintenance required to keep the Razer Arctosa in optimum condition. Once a month, we recommend that you unplug the keyboard from the USB port and clean the keys on Razer Arctosa with a soft cloth or cotton swab. Use a little warm water but avoid soap or harsh cleaning agents.

LEGALESE

COPYRIGHT INFORMATION

©2008 Razer USA Ltd. All Rights Reserved. Razer™, the Razer Triple-Headed Snake logo, the Razer distressed word logo, Arctosa™ and other trademarks contained herein are the property of Razer USA Ltd and/or its affiliated or associated companies, registered in the United States or other countries. Actual product may differ from pictures.

Razer™ assumes no responsibility for any errors that may appear in this manual or help file. Information contained herein is subject to change without notice.

Razer™ may have patents, patent applications, trademarks, copyrights, trade secrets or other property rights, intellectual and otherwise concerning the product and subject matter in this manual. Except as is provided in any written license agreement provided by Razer™, furnishing of this manual does not give you a license to any such patents, trademarks, copyrights or other intellectual property rights, whether registered or otherwise. Patent Pending.

LIMITATION OF LIABILITY

The warranties set forth in this agreement replace and/or supersede all other warranties and your remedies for breach of warranty are expressly limited to those herein set forth. Razer™ expressly disclaims all other warranties to the extent allowed by law including, but not limited to, the implied warranties of merchantability, fitness for a particular purpose and non-infringement of third-party rights with respect to the documentation, software (including patches and/or updates) and hardware. No Razer™ supplier, dealer, agent, or employee is authorized to make any modification, extension or alteration of the warranty or to substitute products or services, lost profits, loss of information or data, or any other special, indirect, consequential or incidental damages arising in any way out of the distribution of, sale of, resale of, use of, or inability to use any product or software subject to warranty herein set forth. In no event will Razer™ be liable for any special, incidental, indirect or consequential damages whatsoever.

FCC DECLARATION OF CONFORMANCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio TV technician for help.

For more information, refer to the online help system on your Razer Arctosa™ Gaming Keyboard CD ROM or www.razerzone.com